


Capacities for Emptying			
Biotec 1	2300 litres	506 gallons	
Biotec 2	3500 litres	770 gallons	
Biotec 3	5400 litres	1200 gallons	
Biotec 4	5400 litres	1200 gallons	

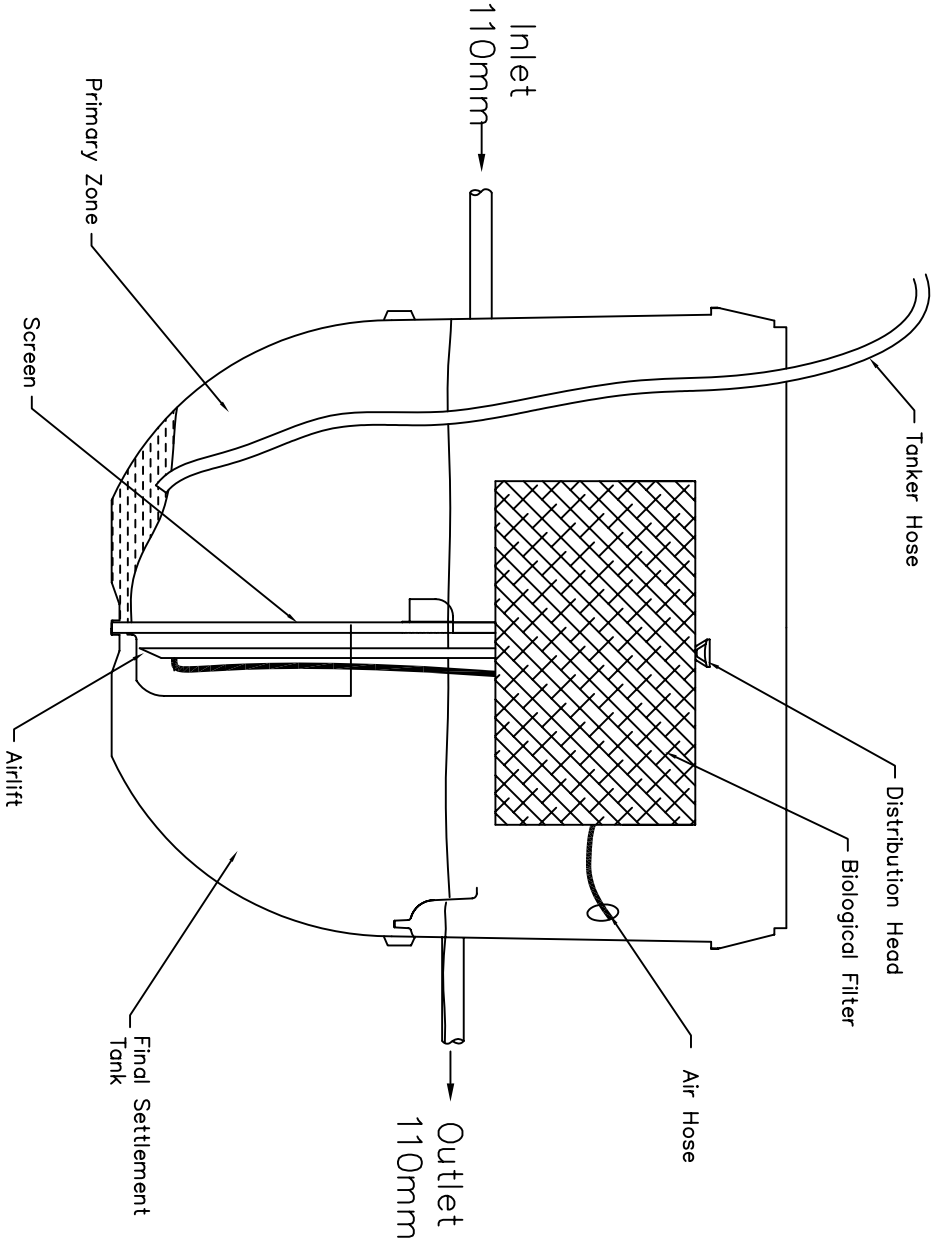

### Notes

Switch off blower in local housing.

Remove access cover.

Always empty the tank ensuring equilibrium in water levels either side of the screen.

At the inlet side of the plant, push the suction hose to the bottom of the opening (approx. 2m) and reduce the water level by 300mm, remove the hose and place in the outlet side, also removing 300mm, continue this process, until the tank is completely empty.

At no time should the difference in water levels either side of the screen exceed 300mm.

On completion, the plant should be refilled with fresh water.

Switch the blower back on, only when the water level in the plant has been reinstated.

If in doubt, please contact:  
Kingspan Environmental Services  
0845 355 0555.

2	21.04.09	JC	Re-branding
1	13.01.09	JC	CO379
ISSUE	DATE	DRAWN	MODIFICATION
This drawing is copyright and may not be reproduced or used without the written permission of Kingspan. KINGSPAN RESERVE THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE			
			

ALL DIMENSIONS ARE IN MILLIMETRES – DO NOT SCALE		TITLE	
		SMALL BIOTEC DESLEDGING PROCEDURE SALES DRAWING	
SCALE	NTS	SHEET SIZE	—
DRAWING NO.	DS0668P	ISSUE	2