

miniClima EBC: *Connecting LVB or Sensor Box*

1 CONNECTING THE DISTRIBUTION BOXES LVB

- Connect the LVB set as shown in the picture.
- The arrows on the LVBs indicate the required direction for the air stream. **Note that the direction of the arrow on each LVB box shall correspond to the direction of the arrow of the pipe connection on the EBC.**



2 CONNECTING THE SENSOR BOXES

- Connect the sensor box as shown in the picture below. **The sensor box should be placed as close to the showcase as possible. IMPORTANT: The sensor box has to be added to the return stream of the EBC, not to the stream going from the EBC to the showcase!**
- The arrow on the sensor box indicates the required direction for the air stream. **Note that the direction of the arrow on the sensor box shall correspond to the direction of the arrow of the pipe connection on the EBC.**

**miniClima Schönbauer GmbH**

Brunner Str. 21b, 2700 WIENER NEUSTADT, AUSTRIA, EU

Tel. | Phone: +43 2622 24964, +43 6991 24964 01, Voicemail: +43 6993 24964 01, Fax: +43 2622 24964 15, E-Mail: office@miniclima.com

www.miniclima.com, twitter.com/miniclima, www.miniclima.com/dt/miniclima-newsfeed_dt.xml | www.miniclima.com/en/miniclima-newsfeed_en.xml

UID | VAT-ID: ATU61994435, EORI: ATEOS1000001229, DVR: 4008782

Firmenbuchnummer | Trade Register Number: 267137z (Landesgericht | Regional Court of Wiener Neustadt)



As of 12.08.2016. Subject to modification.

miniClima EBC: Connecting LVB or Sensor Box