


## Position of the bottle sensor on newly delivered units with 2 litre bottle

In order to avoid transport damages, the holders for the bottle sensors on EBCs with 2.0l bottles are sometimes not screwed to their correct position. For repositioning the holder, please do take out the screws which affix the holder (aluminium bracket; see the indicated screws in the figure below). Then place the holder with the sensor correctly as displayed below and fix it with the two screws again:

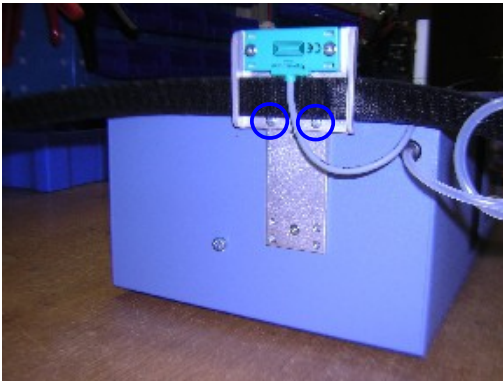

Correctly positioned holder for the 2 litre bottle (in the picture: bottle holder mounted to the EBC's side panel; the procedure is the same for bottle holders mounted to the front panel of the EBC). The screws which need to be loosened are indicated in blue.