


TIMBER EDGING UPSTAND

Scale 1:10

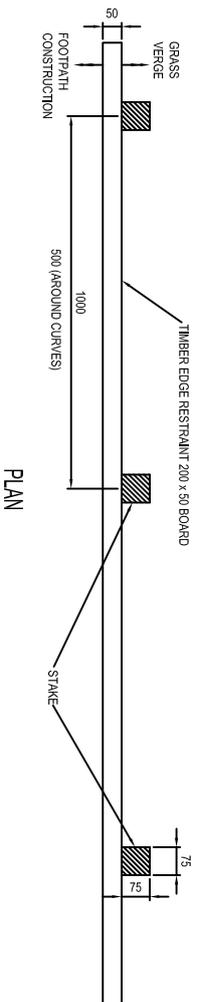

Scale 1:20

NOTES:

1. TIMBER TO BE TREATED WITH CREOSOTE UNDER VACUUM PRESSURE TO BS 5589 TABLE 4 CAT. B BEFORE INSTALLATION.
2. CARE TO BE TAKEN TO AVOID DAMAGE TO HEAD OF STAKE DURING DRIVING.
3. NAILS TO BE GALVANISED.
4. REFER TO LAYOUT DRAWINGS FOR LOCATION OF NEW FOOTPATH AND WHERE THE EXISTING CONSTRUCTION IS TO BE REINSTATED AFTER THE EDGING HAS BEEN INSTALLED.
5. ALL DIMENSIONS ARE IN MILLIMETRES UNLESS STATED OTHERWISE.

SECTION REF:	Edging	Drawing Number:	PS/LDG/1011/42
DRAWN BY:	PBA	SCALE	VARIES
APPROVED BY:	PBA		
	JAN 2010		