



3 metres @ 120
15 metres @ 110
2
1
0.5
1
0.5
15 metres @ 110
8 metres @ 150
13
11
9
7
5
3
1
0

Jamb and soffit linings to follow pattern of door leaf, jointed in a similar way and fixed to the masonry jambs/soffit using non-ferrous fixings and packers to ensure that the timber panels are flat and square and not in any way distorted. Countersink fixing holes and fill with timber pellets, ready for decoration

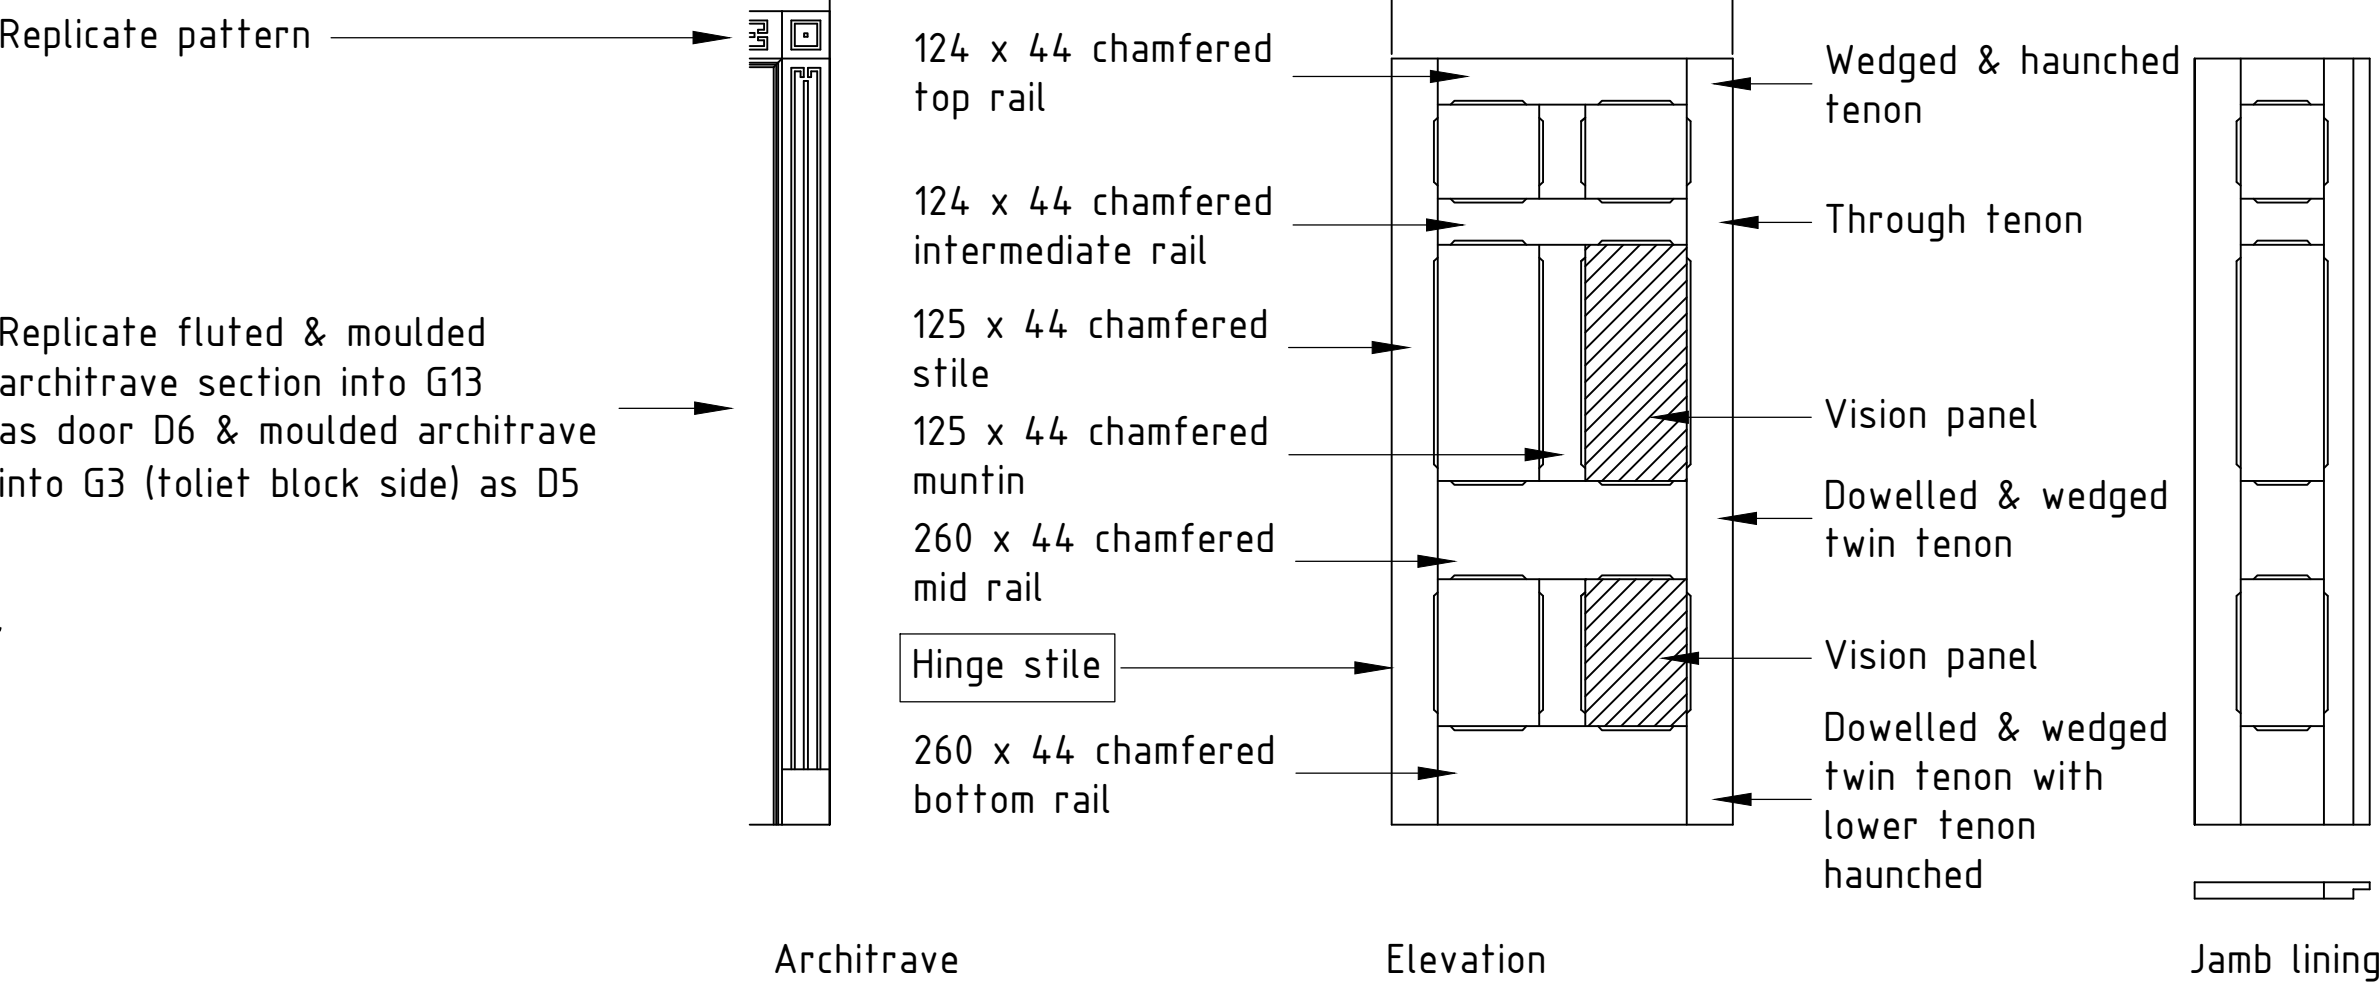


Framed & panelled door ND1

- Notes
1. Door, jamb & soffit linings and architraves to match kitchen door D6 into G13 & D4/D5 into G3 toilet block
 2. Door head height and rail heights to line through with kitchen door D6
 3. Use best quality well seasoned softwood and ensure that the door does not warp or bend once installed.
 4. Use traditional jointing as indicated with wedged and dowelled joints

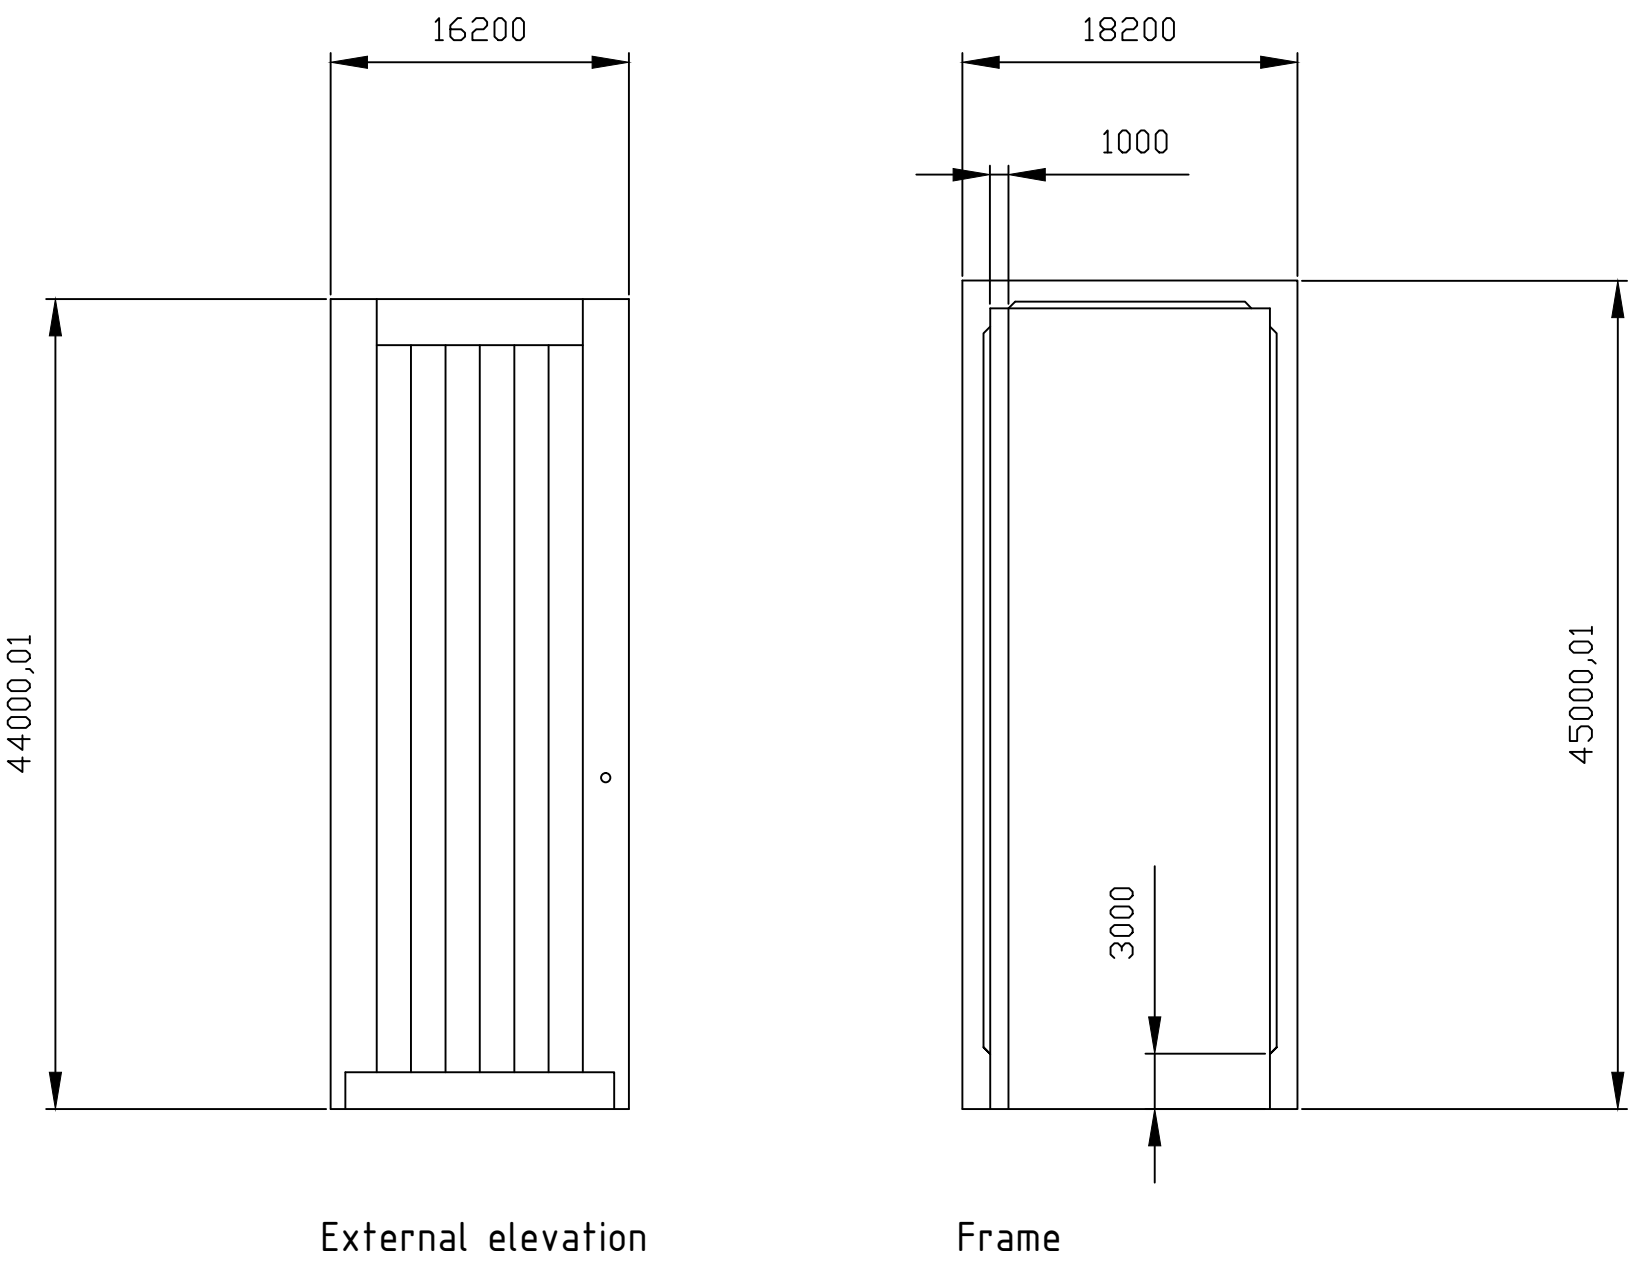


Framed ledged braced & battened door ND9 (outward opening)

Construction of door ND9 same as ND4

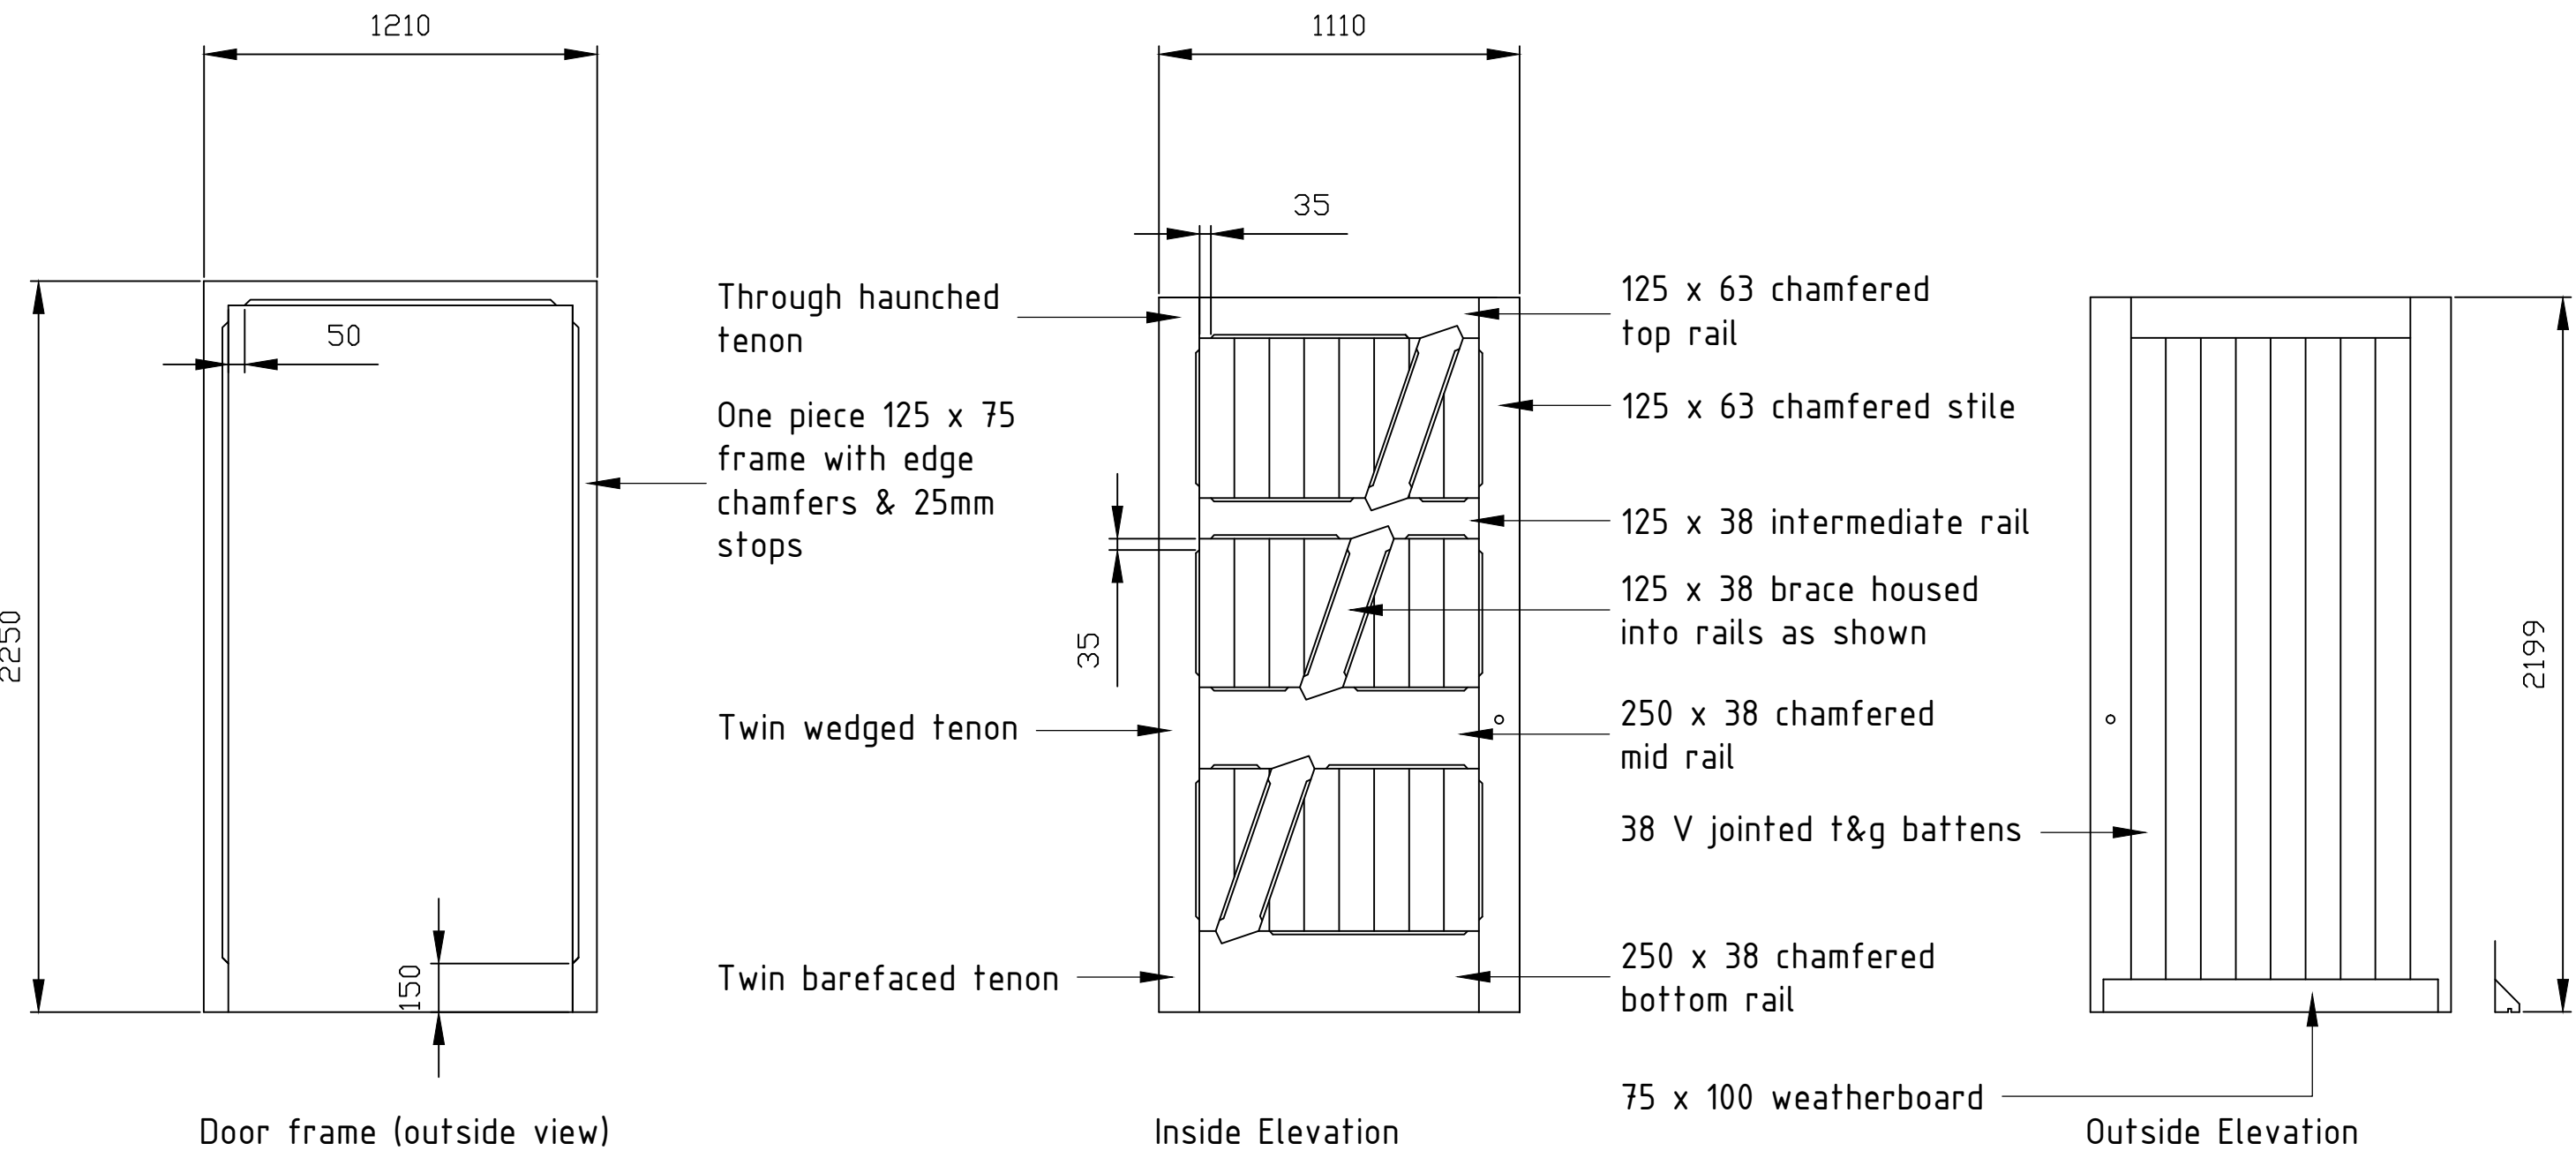

Framed ledged braced & battened door ND4 (inwards opening)

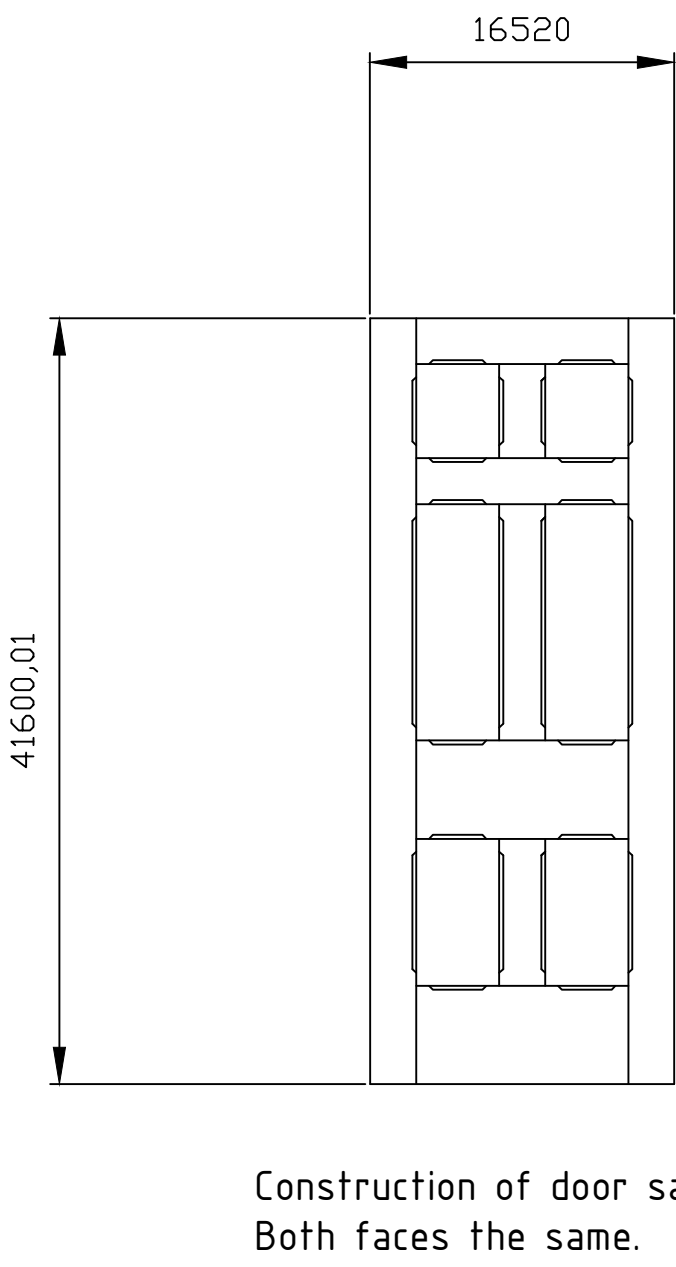

Framed & panelled door ND2, ND3, ND5, ND6, ND7, ND8

- Notes:
1. All buildings and the site generally are of significant historic importance & are protected by law.
 2. Drawing to be read in conjunction with the Preliminaries and Workmanship sections and the Schedule of Works;
 3. Do not scale from drawings & check all dimensions on site including levels;
 4. Do not carry out any work outside the specified work unless instructed in writing by the CA as this may not have statutory consent;
 5. If in doubt ask.